


BALI-150
INSTRUCTION OF THE INSTALLATION



INSTALL FRONT COVER (ONE)

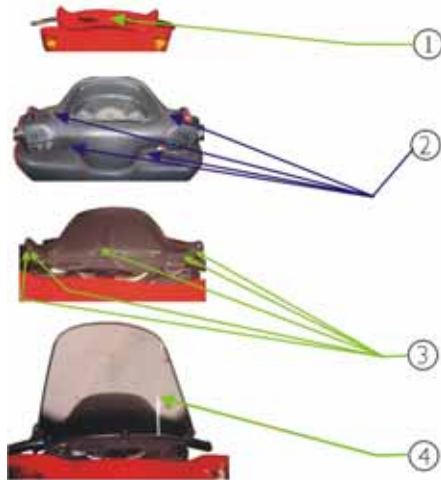

| Description | Quantity | Specification | Remark |
|---------------------|----------|---------------|--------------------------|
| ① Front wind cover | 1 | | Front of steering handle |
| ② Self-tapped screw | 4 | ST4.8×16 | Back of meterhood |
| ③ Bolt | 5 | M6×12 | Front of meterhood |
| ④ windshield | 1 | | On motorcycle |

Install step:

1. Take out of 2 from 1, reserve the self-tapped screw
2. Take out of the 3, and then put on 4, fasten by 3
3. Put on 1 like primary condition, and fasten by 2

INSTALL THE INSTALL THE LUGGAGE CARRIER(TWO)




| Description | Quantity | Specification | Remark |
|-------------------|----------|---------------|-----------------------|
| ① Screw | 2 | M8×45 | On Motorcycle |
| ② Screw | 2 | M8×55 | In sundries box |
| ③ luggage carrier | 1 | | In iron frame packing |
| ④ Collar | 2 | | In sundries box |
| ⑤ Body | | | |

Install step:

1. Connect ③④⑤ by ①②, then fasten well.

INSTALL REARVIEW MIRROR(THREE)

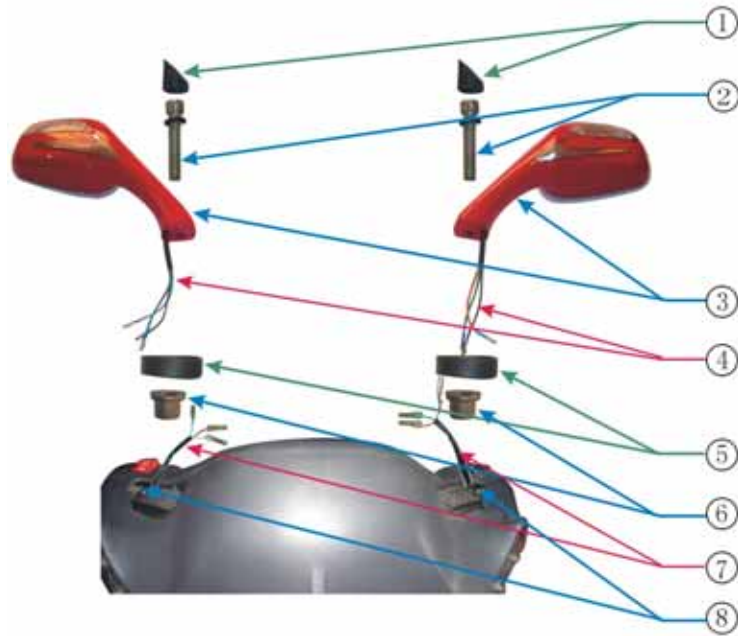

| Description | Quantity | Specification | Remark |
|-----------------------------|----------|---------------|-----------------|
| ① waterproof rubber | 2 | | In sundries box |
| ② Bolt | 2 | M8×45 | In sundries box |
| ③ Rearview mirror (RHL) | 1 | | In sundries box |
| ④ Rearview mirror line | 2 | | In sundries box |
| ⑤ Rubber | 2 | | In sundries box |
| ⑥ Collar | 2 | | In sundries box |
| ⑦ Sub-cable | 2 | | On Motorcycle |
| ⑧ Rearview mirror holder | 2 | | On Motorcycle |


Install step:

- ④ Through ⑤ and then connect with ⑦
- ③, ⑤, ⑥ must be crossed by ② and fasten by ⑧. Before you locked it, adjusting the angle of rear mirror.
- Put ① into ③' screw hole.

Attention:

- When you connect the electrode ④ with ⑦, make sure yellow line connect with yellow, and green line connect with green, brown line connect with brown blue line connect with blue

INSTALL BATTERY (FOUR)

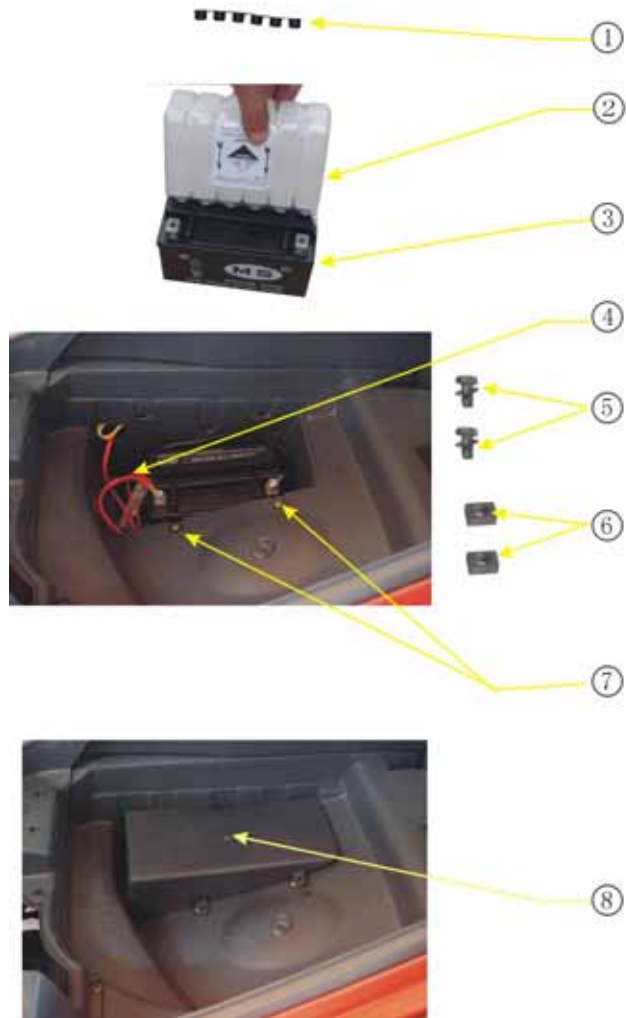

| Description | Quantity | Specification | Remark |
|------------------------|----------|---------------|-----------------|
| ① battery sealed strip | 1 | | In sundries box |
| ② Electrolyte | 1 | | In sundries box |
| ③ Battery | 1 | 12V7h | In sundries box |
| ④ Battery line | | | In sundries box |
| ⑤ Battery Bolt | 2 | | In sundries box |
| ⑥ Battery Nut | 2 | | In sundries box |
| ⑦ Battery Cover Screw | 2 | | On Motorcycle |
| ⑧ Battery Cover | 1 | | In sundries box |

Install step:

1. inject ② into ③, refer the instruction of battery then cover ①.
2. Put ③ into battery box , connect electrode ④ by ⑤ and ⑥ fasten them
3. Take down ⑦ from vehicle , cover ⑧ and tighen by ⑦

Attention:

1. When you connect the electrode 4, make sure red line connect "+" anode, and green line connect "-" cathode
2. After installing battery, and inject electrolyte, then leave it for thirty minutes, then charge it.